

FTDX9000 Serial Number Format

This is not new - it's just for reference. Use this conversion table to decode your serial number.

FTDX9000 Serial Number Format
Y M R R U U U U
Y = Last digit of Year
M = Month Code
RR = Production run
UUUU = unit number in the production run

Serial Number 5 G 02 0088
5 = 2005
G = May
02 = Second Production Run
0088 = 88th unit in the Run

Month Code	Month
A	Not used
B	Not used
C	January
D	February
E	March
F	April
G	May
H	June
I	July
K	August
J	September
L	October
M	November
N	December