



This interface works also fine between the IC-7700 and the LPT1 port of a laptop, in combination with N1MMLogger software.

CONNECT SAFELY YOUR LPT PORT FOR CW & PTT

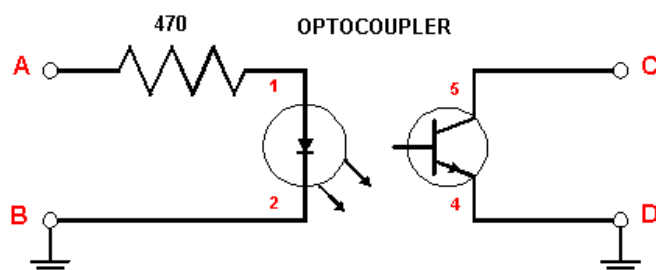

- DX4WIN & WRITELOG CW VIA LPT-PORT
- =====
- A = PIN 17
- B = PIN 1
- C = + CW KEYS INPUT
- D = GND TRANSMITTER
-
- DX4WIN & WRITELOG PTT VIA LPT-PORT
- =====
- A = PIN 16
- B = PIN 18
- C = PTT TRANSMITTER
- D = GND TRANSMITTER

**YAESU FT920 WIRING FOR CW + PTT
SETUP FOR WRITELOG & DX4WIN (PTT ONLY STARTING V 4.06)**

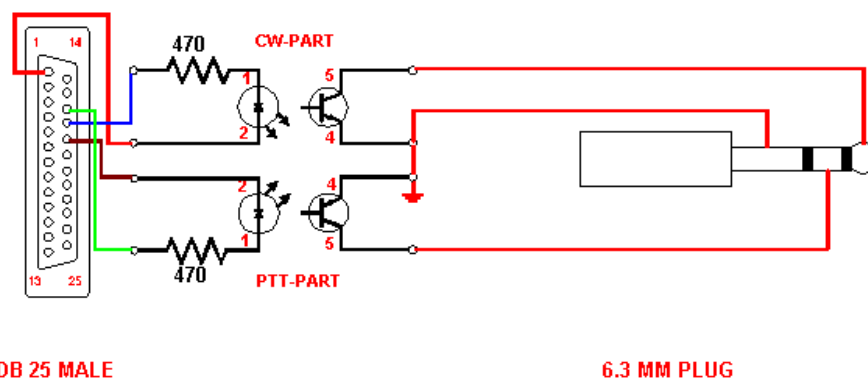

**THE FT920 SHOULD BE CONNECTED ON THE REAR AND WITH
KEYER SWITCH "ON" & PDL-KEY SWITCH TO "KEY".**

Please use this interface at your own risk.